

# QQ CAP 232EX MANUAL ADDENDUM

## Receiver Installation/Servo Connections (Page 9)

It has come to our attention that there was an error in the "Default Aura Connections" chart on page 9 of the QQ Cap 232EX manual. Please reference the chart to the right for the correct "Default Aura Connections".

Rev. 1.0  
1/28/18

### DEFAULT AURA CONNECTIONS

<b>S1</b>	<b>Throttle (ESC/BEC)</b>
<b>S2</b>	<b>Left Aileron</b>
<b>S3</b>	<b>Right Aileron</b>
<b>S4</b>	<b>Elevator</b>
<b>S5</b>	<b>Rudder</b>
<b>S6</b>	<b>(Empty)</b>
<b>S7</b>	<b>LED Controller</b>
<b>S8</b>	<b>(Empty)</b>